


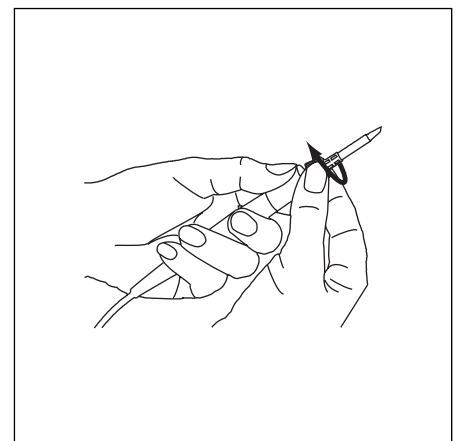
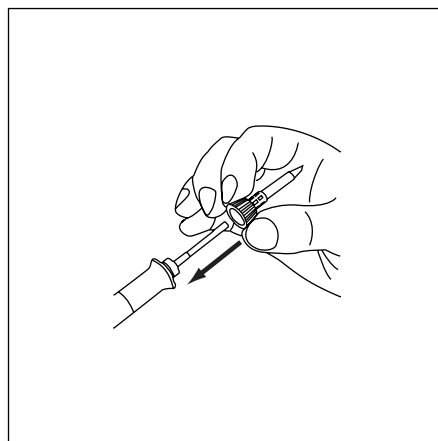
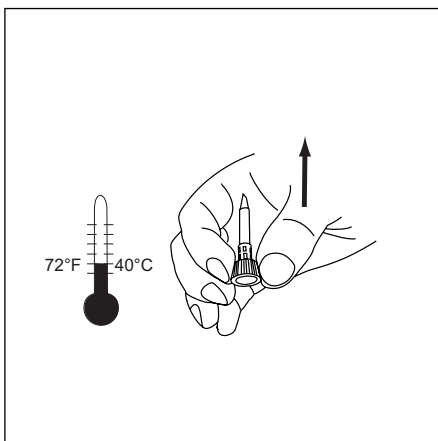
 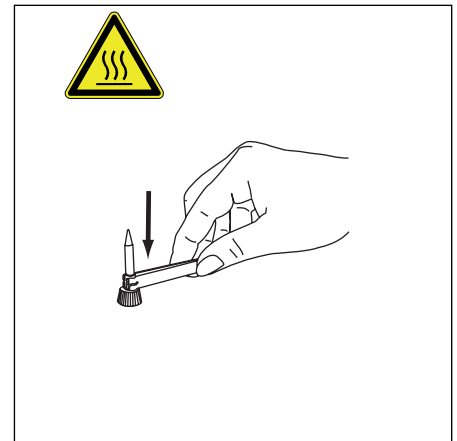


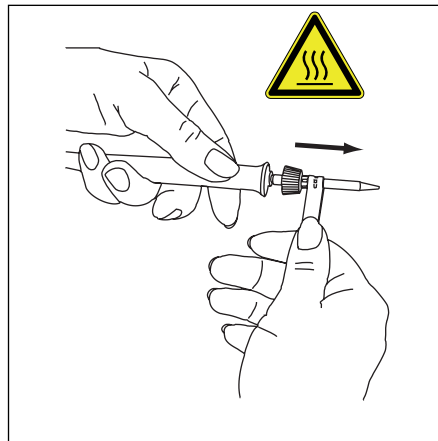

- D** Wechseln der heißen Lötspitze
- GB** Changing the hot soldering tip
- F** Remplacement de la pointe à souder chaude
- E** Cambio de la punta de soldado caliente
- P** Substituir a cabeça de soldar quente
- I** Cambiare la punta calda dello stilo saldante
- RUS** Замена холодного жала паяльника
- CHI** 更换热态烙铁头
- S** Byte av varm lödspets
- FIN** Kuuman juotinkärjen vaihtaminen
- JP** 高温時のコテ先交換

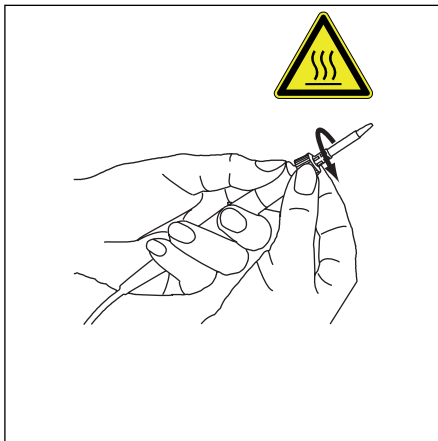



- D** Wechseln der kalten Lötspitze
- GB** Replacing the cold soldering tip
- F** Remplacement de la pointe à souder froide
- E** Cambio de la punta de soldado fría
- P** Substituir da cabeça de soldar arrefecida
- I** Cambiare la punta fredda dello stilo saldante
- RUS** Замена холодного жала паяльника
- CHI** 更换冷态烙铁头
- S** Byt den kalla lödspetsen
- FIN** Kylmän juotinkärjen vaihtaminen
- JP** 低温時のコテ先交換

